

MOUNTING PROCEDURE

KIT WINDSHIELD KTM DUKE 125 - 200 - 390

KTM3300

WWW.BARRACUDAMOTO.COM

FIXING PROCEDURE:

LOOSER THE FRONT HIGHLIGHT AND TAKE OFF THE UPPER SCREWS FROM THE STEERING;


APPROACH TOGETHER THE SPECIFIC STIRRUP (A-B) LIKE THE PHOTO;

FIND THE RIGHT POSITION OF WINDSHIELD ON THE BASKETS ALREADY FIXED AND PROCEED TO LOCK ALL THE SCREWS;


KIT

- X1. PLEXIGLASS
- X4. SPECIFIC STIRRUP
- X4. SCREW "ROUND HEAD" 5X12
- X2. SCREW "ROUND HEAD" 6X14
- X2. TBL 6X10
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER
- X4. WASHER Ø 5 LARGE
- X4. NUT Ø 5 AUTOLOCK
- X2. NUT Ø 6

MOTORBIKE FIXING

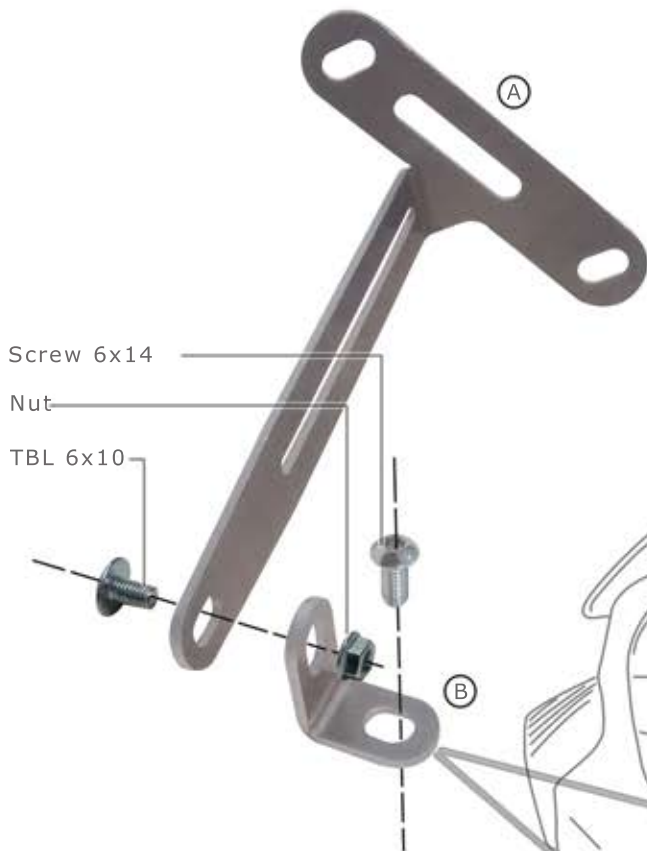

WINDSHIELD FIXING

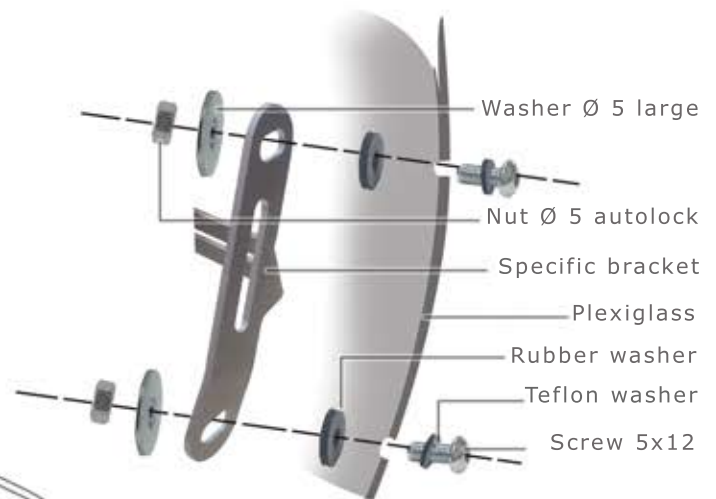

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.