MOUNTING PROCEDURE

KIT LICENCE PLATE MV AGUSTA BRUTALE 675

MB6104-13

KIT

X4 THICKNESS H 10

X4 RUBBER WASHER


X4 SCREWS 6X25 X4 AUTOLOCK NUT DIAMETER 6

X1 SPECIFIC BRACKET
X1 "X" LICENCE PLATE

WWW.BARRACUDAMOTO.COM

MOUNTING PROCEDURE:

- REMOVE THE SIDEWALL , REMOVE THE ORIGINAL LICENCE PALTE AND APPROACH THE BARRACUDA SPECIFIC BRACKET ON THE UNDERTAIL FINDING THE ATTACK POINTS;
- FIX THE LICENCE PLATE USING THE SCREW 6X25, PUT THE THICKNESS H 10 AND THE RUBBER WASHER BETWEEN THE FAIRING OF MOTORBIKE LIKE DESCRIBED IN THE PICTURE;
- SCREW THE AUTOLOCK NUT AND LOCK THE SCREWS 6X25;
- MAKE THE SAME OPERATION FOR ALL THE ATTACK POINTS OF BRACKET;
- APPLY THE "X" LICENCE PLATE TO THE JOINT OF SPECIFIC BRACKET;

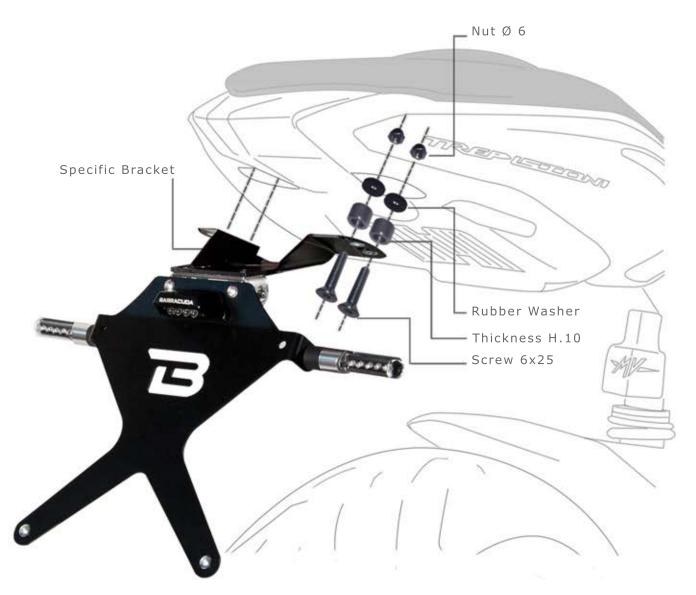

NOTE: WE ADVICE AN INCLINATION NOT EXCEEDING TO 30° TO AVOID SANCTIONS AND POSSIBLE DAM-AGES.