

MOUNTING PROCEDURE


KIT SAVE CARTER YAMAHA XJ6

YJ6101

WWW.BARRACUDAMOTO.COM

KIT

X2 PVC HEAD
X2 SAVE CARTER BASE
X2 SPACER
X2 BOLT 10X30
X2 BOLT 10X100
X3 NUT DIAMETER 10
X7 BUSH DIAMETER 10

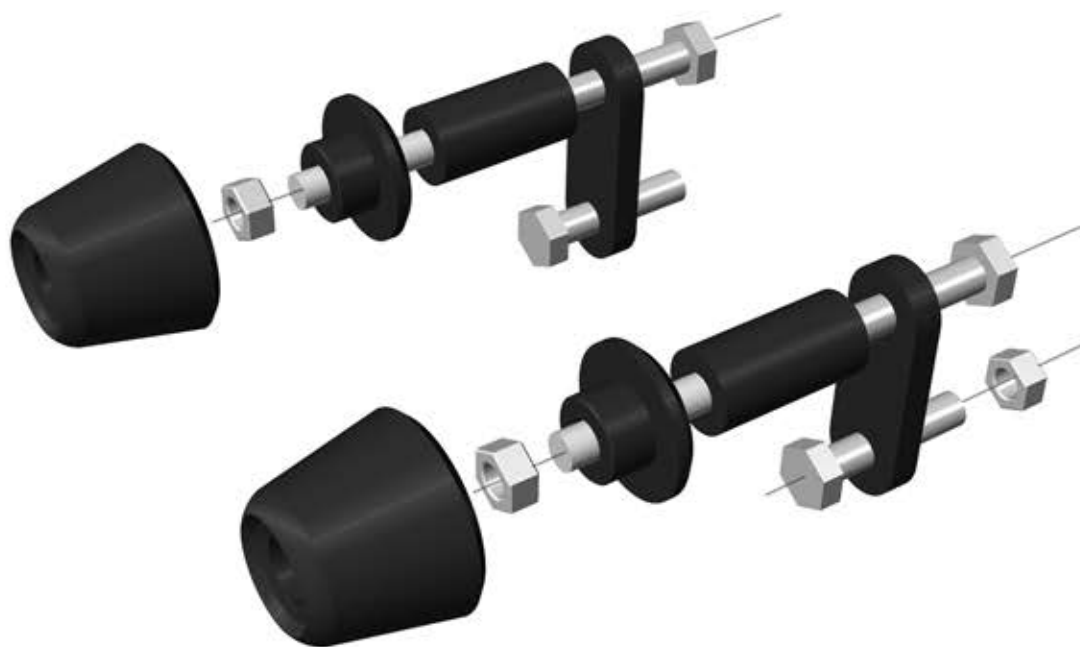

ATTACK POINT TO THE CHASSIS



SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).
FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY