


ASSEMBLING INSTRUCTION

LEVER PRO-TECT

WWW.BARRACUDAMOTO.COM

COMPLETE SET

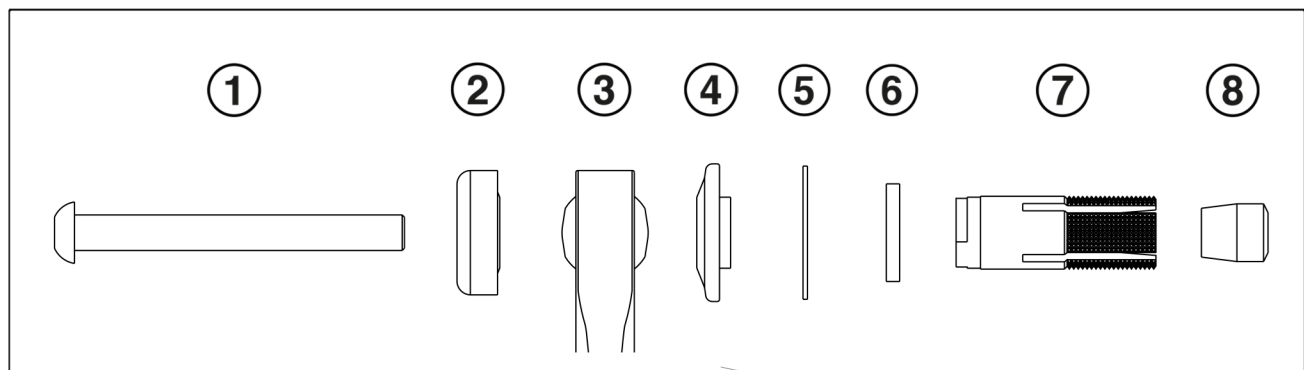

⚠
M6x55
NOT INCLUDED

BMW1000-10
ADAPTER

